

142.50 mm

INSTRUCTION MANUAL

Food Chopper

T-818



Please read this booklet carefully before fixing and using
And save it for future reference

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Do not let cord hang over edge of table or hot surface.
7. Do not immerse upper part of blender into water as this would give rise to electric shock.
8. Close supervision is necessary when your appliance is being used near children or infirm persons.
9. Avoid contacting moving parts.
10. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
11. The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be blunted.
12. The use of accessory not recommended by the manufacturer may cause injuries to persons.
13. Do not operate the appliance for other than its intended use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Do not use outdoors.
17. Save these instructions.

HOUSEHOLD USE ONLY

Know your food chopper (It is suitable for blending vegetable and fruit)



- A. Push button
- B. Lid
- C. 250ml chopper bowl

Before the first use

Clean the chopper bowl according to the section of "quick cleaning".
The time running unit without load can't exceed 15s.

Important: Blades are very sharp, handle with care. Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.

Using your food chopper

Max operation duration under high speed per time cannot exceed 1 minute.

1. Simply plug the hand-held blender to power outlet.
2. Lower the hand-held blender into food and depress the switch at the top of the motor unit.
Note: the appliance cannot be used for blending hard and dry substance, and cannot be used for breaking ice.
3. To stop the hand-held blender release the switch at the top of the motor unit.

CLEANING AND MAINTENANCE

1. Unplug the appliance before cleaning.

Note: Never immerse the hand-held blender in water or other liquids.

2. Wash blade in warm soapy water.
3. Wipe blender with a damp cloth.
4. Dry thoroughly.

Caution: Blades are very sharp, handle with care.

Quick cleaning

Between processing tasks, hold the hand-held blender in the cap half filled with water and turn on for a few seconds.

TECHNICAL DATA

220-240V~50Hz,100W

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

210.00 mm