

- children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack
- of experience and knowledge if they have been given supervision or instruction concerning use of
- the appliance in a safe way and if they understand the hazards involved.

**Clean and care**

- when you cleaning ,please pull the cord first, take filter and separate the move filter ,revolve the cup at right direction ,pull the transmit axes and cleaning one by one
- Install step is reverse unpick and wash
- Covered the cup cover and store in ark after cleaning

**Technology Parameter**


- Voltage : 220-240 V~
- Power : 40W
- Frequency : 50 Hz
- Capacity : 1.0L

**Correct Disposal of this product**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



**HomeElectric**  
**CITRUS JUICER**  
**INSTRUCTION MANUAL**

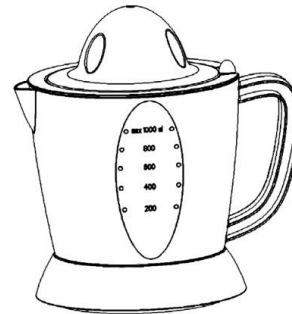


MODEL NO.: T-609  
220-240V~, 50Hz, 40W

Dear Customer!

Thanks for buy our product. This kind of citrus juicer is excellent in design and made out of high qualitative components. We hope this set can take with you be well and convenience.

**Structure Illustration**

- a. top cover
- b. extractor cover
- c. extractor
- d. move filter
- e. fix filter
- f. cup
- g. transmit axes
- h. base

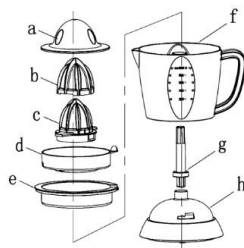

**Important Instruction**

**When using electrical appliances , In order to reduce the risk of fire , electric shock , or injury to persons ,Basic safety precautions should also be followed , including the following:**

- **following: Please kindly pay your attention to below points:**
- Read all instructions carefully, even if you are familiar with the appliance.
- The electric power supply should come from a properly wired outlet .also ,
- Check the capacity of the out and use the appliance separately from other equipment .
- Always ensure the voltage to be used corresponds to the voltage stated on the unit .
- Put the electric products in dry and stable flat. Using dried cloth when cleaning the machinery body.
- The appliance is suitable to soft fruits, such as orange etc. And can't meet the hard fruits so as to avoid being broken because of the over.
- Shut off the electric power for the following happenings:
  - a. The turning blades working is not correct.
  - b. The uncommon voice when using.
  - c. Cleaning.

d. Finish using

- Keep it away from the children and avoid accident
- This appliance rate capacity, do not excess this scale on working
- After use unplug from the outlet .( when unplug , always grasp the plug And unplug it from the outlet .)
- This appliance is designed only for household use

**ATTENTION : DO NOT USE FOR MORE THAN 1 MINUTE CONTINUOUSLY .WAIT 15 SECONDS BETWEEN EACH USE .NO MORE THAN 10 CYCLE .**

**SAVE THIS INSTRUCTION .**

**Using Method**

- Put out the power wire from the bottom fixed pot. and make power be on, put off the lid, then the machine is on waiting
- Separate the cleaned fruits from the middle and put them on the top of turning blade, press the fruit heavily with hands and make the turning blade turn.
- One hand take the handle of juice cup, the other fix the machinery when put the juice into the cup. Turn the juice cup right to 30 degree and put it up to make the body separated, put the juice into cup. Continue working, must do it according to the contrary above steps
- One hand fix the juice cup, the other one handle the filter firmly, make it to be separated from juice cup completely and turn the filter to make the leaving into rubbish tube when you use this machinery; continue working, must put the filter on the juice cup .
- This appliance can adjust the move filter according as how much the fruit's Tendon ,five shift is more and the first shift is few. First shift extracted the fruit is usually pure.
- This appliance have two extracted head ,if you extracted big fruit can use extracted cover
- Do not put the whole or parts of body into water
- If the supply cord is damaged, must be replaced by the manufacture or its service agent or a similarly qualified person in order to order to avoid a hazard.
- Always disconnect the appliance from the supply if it is left unattended and before assembling,
- disassembling or cleaning.
- This appliance can be used by children aged from 8 years and above if they have been given
- supervision or instruction concerning use of the appliance in a safe way and if they understand
- the hazards involved.Cleaning and user maintenance shall not be made by children unless they
- are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of