


说明书尺寸: A5

COFFEE MAKER INSTRUCTION MANUAL

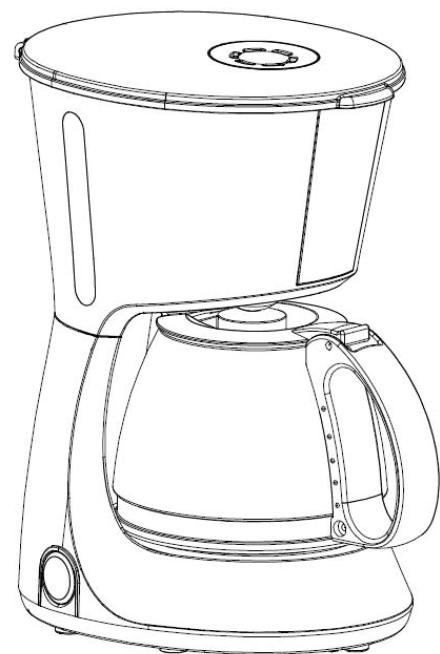

MODEL: HK-508

Rating: 220-240V~, 50/60Hz, 550W, Class I, IPX0

Read this booklet thoroughly before using and save it for future reference

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments;

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Do not immerse appliance or power cord into water or any other liquids.
2. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Before using it, check that the voltage of wall outlet corresponds to coffee maker rating plate.
5. The appliance must be earthed.
6. Close supervision is necessary when your appliance is being used near children.
7. Do not place the coffee maker on hot surface or beside fire, avoid to be damaged.
8. Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before taking off, attaching

01

components or before cleaning.

9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
10. The use of accessory which is not recommended by manufacturer may cause injury to persons or damage to appliance.
11. Place appliance on flat surface or table, do not hang its power cord over the edge of table or counter.
12. Ensure that the power cord does not touch hot surface of appliance.
13. Some parts of appliance is hot when operated, so do not touch with hand directly.
14. Never leave the empty carafe on the keeping warm plate otherwise the carafe is liable to crack.
15. Do not use outdoors.
16. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
17. Warning: Misuse may cause injury.
18. The heating element surface is subject to residual heat after use.
19. Save these instructions booklet for future reference.
20. Save these instructions booklet for future reference.

HOUSEHOLD USE ONLY

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

1. Pour 600ml water into water tank.
2. Set nylon filter in funnel (add no coffee ground), then cover up water tank cover.
3. Place drip carafe on keeping warm plate.

02

MAKE DRIP COFFEE

1. Open the water tank cover, pour proper drinking water into water tank according to the mark in the tank.
2. Add ground coffee to nylon filter with measuring spoon, a spoon ground coffee power can make a cup of top-grade coffee, but you can adjust according to the taste yourself.
3. Set nylon mesh into funnel.
4. Push drip carafe on keeping warm plate, pay attention to let center line of carafe aligns with that of funnel.
5. Press ON /OFF switch, the red indicator will be illuminated and coffee will drop out automatically after a while. Note: at any time, you can take out carafe to serve but the time cannot exceed 30 seconds, otherwise the coffee may overflow from the edge of funnel.
6. The coffee maker will turn to keeping warm mode if brewing coffee is finished. At the time you can cut off power.
7. After product finishing working, please shut down the power switch immediately.

WARNING: Do not leave the coffee maker unattended during making the coffee, as you need operate manually sometimes!

CLEAN AND MAINTENANCE:

1. Cut off power source and let the coffee maker cool down completely before cleaning.
2. Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip insulation board, funnel, filter screen and drip carafe regularly then dry them.
Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.
3. Open the water tank cover, get out the funnel and filter screen or anticlockwise rotate the funnel, then get out the funnel and filter screen (this is two kinds of common modes for getting out the funnel of drip coffee machine), then you can clean it with cleanser, but at last you must rinse with clear water.
4. Clean all the attachments in the water and dry thoroughly.

03

CLEANING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water every three months or according to the water quality in your area and the frequency use the appliance, the detail is as follows: fill the carafe with one part of white vinegar and three parts of cold water, pour the water and vinegar mixture into the tank, do not place into coffee ground, brewing the water-vinegar solution per "Before the first use", repeat it until no yellow liquid comes out if necessary, then pour out the mixture, brewing with tap water until no vinegar odor is left.

TROUBLESHOOTING

Symptom	Cause	Corrections
Carafe leakage water or water leaks out from lid of jug	The jug is not located properly	Let centreline of jug aligns with leakage opening of funnel well.
The coffee drops too slowly or overflows from the edge of removable funnel	Coffee powder is too fine or contain too fat	Use coarser coffee powder.
	Nylon filter too dirty	Clean nylon filter with clear water.
Coffee residue in jug	Heating tube contains incrustation	Refer to cleaning mineral deposits
Water leaks from the bottom of coffee maker.	Leak water in the unit	Do not use the coffee maker again, contact with certified serving center.

04

The coffee maker can not work any more.	The coffee maker heats in abnormal state, which causes its automatic safety protective system is activated.	The coffee maker should be able to rework after keeping still for 30 seconds, otherwise contact with certified serving center.
Coffee temperature is lower	lack water	Fill enough water

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact certified serving center.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



05