

16.09.04

285.00 mm

COFFEE MAKER INSTRUCTION MANUAL



MODEL: HK-510
Rating: 220-240V, 50Hz, 900W, Class I, IPX0

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

- Before using the electrical appliance, the following basic precautions should always be followed including the following:
1. Before using it, check that the voltage of wall outlet corresponds to coffee maker rating plate.
 2. The appliance must be earthed.
 3. Close supervision is necessary when your appliance is being used near children.
 4. Do not place the coffee maker on hot surface or beside fire, avoid to be damaged.
 5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before taking off, attaching components or before cleaning.
 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
 7. The use of accessories which is not recommended by manufacturer may cause injury to persons or damage to appliance.
 8. Place appliance on flat surface or table, do not hang its power cord over the edge of table or counter.
 9. Ensure that the power cord does not touch hot surface of appliance.
 10. Some parts of appliance is hot when operated, so do not touch with hand directly.
 11. Do not immerse appliance or power cord into water or any other liquids.
 12. Never leave the empty carafe on the keeping warm plate otherwise the carafe is liable to crack.
 13. Do not use end-over.
 14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 15. Children should be supervised to use that they do not play with the appliance.
 16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 17. Save these instructions booklet for future reference.

HOUSEHOLD USE ONLY

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

1. Pour 1200ml water into water tank.
2. Set nylon filter in funnel (add no coffee grounds), then replace water tank cover.
3. Place drip carafe on keeping warm plate and cup on removable shelf.

MAKE DRIP COFFEE

1. Open the water tank cover, pour proper drinking water into water tank according to the mark in the tank.
2. Add ground coffee to nylon filter with measuring spoon, a spoon ground coffee power can make a cup of top-grade coffee, but you can adjust according to the taste yourself.
3. Set nylon mesh into funnel.
4. Push drip carafe on keeping warm plate, pay attention to let center line of carafe aligns with that of funnel.
5. Press ON/OFF switch, the red indicator will be illuminated, and coffee will drop out automatically after a while. Note: at any time, you can take out carafe to serve but the time cannot exceed 30 seconds, otherwise the coffee may overflow from the edge of funnel.
6. The coffee maker will turn to keeping warm mode if brewing coffee is finished. At the time you can cut off power.

WARNING: Do not leave the coffee maker unattended during making the coffee, as you need operate manually sometimes!

CLEAN AND MAINTENANCE:

1. Cut off power source and let the coffee maker cool down completely before cleaning.
 2. Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip tray and removable shelf regularly then dry them.
- Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.
3. Detach the metal funnel through turn it clockwise, get rid of coffee residue inside, then you can clean it with cleanser, but at last you must rinse with clear water.
 4. Clean all the attachments in the water and dry thoroughly.

CLEANING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water every three months or according to the water quality in your area and the frequency use the appliance, the detail is as follows: fill the carafe with one part of white vinegar and three parts of cold water, pour the water and vinegar mixture into the tank, do not place into coffee grounds, brewing the water-vinegar solution per "before the first use", repeat it until no yellow liquid comes out if necessary, then pour out the mixture, brewing with tap water until no vinegar odor is left.

TROUBLESHOOTING

symptom	cause	correction
carafe leakage water or water leaks out from lid of jug	the jug is not located properly	let centerline of jug aligns with linkage opening of funnel wall.
The coffee drops too slowly or overflows from the edge of removable funnel	coffee powder is too fine or contains too fine nylon filter too dirty	use coarser coffee powder, clean nylon filter with clear water.
coffee residue in jug	filter is blocked	clean filter
water leaks from the bottom of coffee maker	coffee powder is too fine, leak water in the unit	choose coarser coffee powder, do not use the coffee maker again, contact with certified serving center.
the coffee maker can not work any more.	the coffee maker heats in abnormal state, which causes its automatic safety protective system is activated.	the coffee maker should be able to rework after keeping still for 30 seconds, otherwise contact with certified serving center.
lack water	Fill enough water.	

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact certified serving center.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



210.00 mm