


说明书尺寸: A5

COFFEE MAKER INSTRUCTION MANUAL

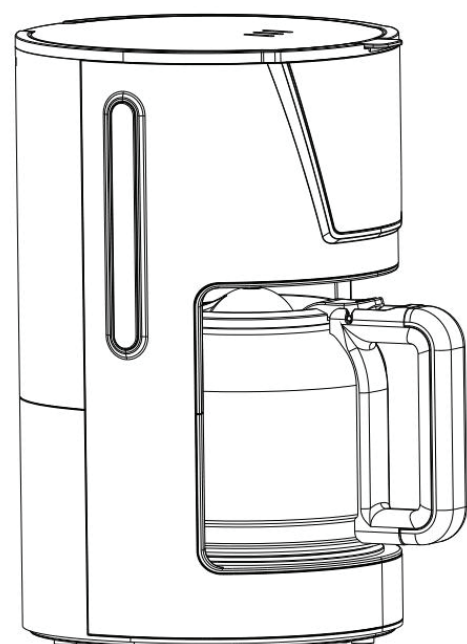

MODEL: HK-520

Rating: 220-240V~, 50/60Hz, 900W, Class I, IPX0

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Before using it, check that the voltage of wall outlet corresponds to coffee maker rating plate.
2. The appliance must be earthed.
3. Close supervision is necessary when your appliance is being used near children.
4. Do not place the coffee maker on hot surface or beside fire, avoid to be damaged.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before taking off, attaching components or before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of accessory which is not recommended by manufacturer may cause injury to persons or damage to appliance.
8. Place appliance on flat surface or table, do not hang its power cord over the edge of table or counter.
9. Ensure that the power cord does not touch hot surface of appliance.
10. Some parts of appliance is hot when operated, so do not touch with hand directly.
11. Do not immerse appliance or power cord into water or any other liquids for cleaning.
12. Do not use outdoors.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to sure that they do not play with the appliance.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Save these instructions booklet for future reference.
18. Do not touch the handle of the lid when appliance is operating.

01

19. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
20. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.

HOUSEHOLD USE ONLY

BEFORE THE FIRST USE

TIMER ① ② ③ CLOCK

12:00

HOUR MIN ON/OFF PROG MODE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

1. Pour 1500ml water into water tank.
2. Set nylon filter in funnel (add no coffee ground), then cover up water tank cover.
3. Place drip carafe on keeping warm plate.
4. Connect to power source, "12:00" will show on display.
5. Press ON/OFF button once, the red indicator is illuminated, coffee will drop out automatically after a while. After a few seconds, press ON/OFF button again, the blue indicator is illuminated, enter auto preparation turn on state. The blue lamp off and red lamp on, the unit enter making coffee state, it will be automatically shut off after 35 minutes after the brewing

02

finished. Press ON/OFF button thrice again the red indicator goes out and the coffee maker stops working.

6. After water not dropping out any more, you can pour the water in each container out then clean them thoroughly, now you can start brewing.

MAKE DRIP COFFEE

1. Open the water tank cover, pour proper drinking water into water tank according to the mark in the tank.
2. Add ground coffee to nylon filter with measuring spoon, a spoon ground coffee power can make a cup of top-grade coffee, but you can adjust according to the taste yourself.
3. Cover up water tank cover, then connect the appliance to power supply source, the display will show 12:00.
4. Set nylon mesh into funnel.
5. Push drip carafe on keeping warm plate, pay attention to let center line of carafe aligns with that of funnel.
6. Press any key, the display will show 12:00. Press down ON/OFF button once, the red indicator is illuminated, coffee will drop out automatically after a while. Note: at any time, you can take out carafe to serve but the time cannot exceed 30 seconds, otherwise the coffee may overflow from the edge of funnel.

SET THE CLOCK AND PROGRAMMING AUTOMATIC START-UP (only fit for making drip coffee)

The appliance has a presetting function, after preparing:

1. Press PROG button, you can set currently time and present time.
2. When LED display CLOCK, press HOUR key and MIN key to finish currently time from 0:00 to 23:59.
3. When LED display TIMER, press HOUR key and MIN key to set time for auto power on from 0:00 to 23:59.
4. The intensity of aroma can be selected by choosing one "①", two "②②"; or three coffee beans "③③③" when pushing the "Mode" button.
5. Press ON/OFF one time and the red lamp on, the unit enter making coffee state, and will shut off after 35 minutes after brewing finished.
6. Press ON/OFF twice time and the blue lamp on, entering auto preparation turn on state. The blue lamp off and red lamp on. The unit enter making coffee for when reservation time was arrived.
7. Press ON/OFF key thrice time, return to wait.

03

WARNING: Do not leave the coffee maker unattended during making the coffee, as you need operate manually sometimes!

CLEAN AND MAINTENANCE:

1. Cut off power source and let the coffee maker cool down completely before cleaning.
2. Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip tray and removable shelf regularly then dry them. Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.
3. Detach the metal funnel through turn it clockwise, get rid of coffee residue inside, then you can clean it with cleanser, but at last you must rinse with clear water.
4. Clean all the attachments in the water and dry thoroughly.

CLEANING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water every three months or according to the water quality in your area and the frequency use the appliance, the detail is as follows: fill the Vacuum flask with one part of white vinegar and three parts of cold water, pour the water and vinegar mixture into the tank, do not place into coffee ground, brewing the water-vinegar solution per "Before the first use", repeat it until no yellow liquid comes out if necessary, then pour out the mixture, brewing with tap water until no vinegar odor is left..

TROUBLESHOOTING

symptom	cause	corrections
Vacuum flask leakage water or water leaks out from lid of jug	the jug is not located properly	let centreline of jug aligns with leakage opening of funnel well.
The coffee drops too slowly or overflows	coffee powder is too fine or contain too fat	use coarser coffee powder.

04

from the edge of removable funnel	nylon filter too dirty	clean nylon filter with clear water.
coffee residue in jug	filter is blocked	clean filter
	coffee powder is too fine.	choose coarser coffee powder.
water leaks from the bottom of coffee maker.	leak water in the unit	do not use the coffee maker again, contact with certified serving center.
the coffee maker can not work any more.	the coffee maker heats in abnormal state, which causes its automatic safety protective system is activated.	the coffee maker should be able to rework after keeping still for 30 seconds, otherwise contact with certified serving center.
	lack water	Fill enough water

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact certified serving center.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



05