

# MY 190938YA 80g双胶纸 黑白底面印刷 装订成册 A5大小

2019-11-29-HomeElectric-FP-2400-说明书

145.0 mm

210.0 mm



## Food Processor Instruction Manual

Model No.: FP-2400



### SAFETY PRECAUTION

When using electrical appliances, basic safety precaution must always be followed:

- Carefully read all instructions before operating and save for future reference.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Switch off and disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Do not use the appliance if the rotating sieve or the protecting cover is damaged or has visible cracks.
- This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of the food.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- This appliance includes a safety switch which prevents operation unless the accessories are securely installed.
- To protect against risk of electric shock, fire or personal injury, do not immerse power cord, plug or motor base in water or any form of liquid.
- Do not immerse Motor Base in water, neither rinse it under tap water.
- Do not push food with fingers, or other objects (like knives), always use the enclosed pusher for feeding food.
- Be extremely careful when handling blades and inserts, especially while assembling and disassembling, and cleaning after use. Blades are very sharp.
- Do not let power cord hang over the edge of a table or counter, or touch any hot surface.
- Do not place the appliance near a gas outlet, electric burner, or heated oven.
- Please wait till all the components stop running before unplugging the power cord and taking off the processing bowl.
- Ensure the capacities shown in the Specifications section are not exceeded.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

### PACKAGE CONTENTS

Part name	Pictures
1.Motor base	
2.Lid 3.Cover 4.Jar	
5.Milling cup 6.Milling blade unit	
7.Feed pusher 8.Processing bowl cover 9.Shaft cover 10.Processing bowl 11.Driving shaft	

12.Chopping blade unit	
13.Kneader plastic blade	
14.Press cone 15.Sieve	
16.Disc holder 17.Fine shredding blade 18.Rough shredding blade 19.Thin slicing blade 20.Thick slicing blade 21.Potato mashed blade	

### Operation

#### Blender without filter (1, 2, 3, 4):

- 2 parts of soft fruit and 3 parts of water (soft fruit only, such as carrot, apple, etc), the soft fruit shall cut into pieces approximately 15 mm x 15 mm x 15 mm
- Do not exceed max. level mark
- Operate with highest speed setting for 2 min

#### Grinder (1, 5, 6):

- Put 100g coffee bean into the grinding cup
- Operate with highest speed setting for 30 seconds

#### Chopper (1, 7, 8, 9, 10, 11, 12):

- Boneless beef or pork that has been cut into pieces approximately 20 mm x 20 mm x 60 mm, total weight not exceed 300g
- Operate with highest speed setting for 30 seconds

#### Kneader (1, 7, 8, 9, 10, 11, 13):

- 500g flour + 250g water + 150 maltodextrin
- Operating 15 seconds with speed 2

#### Citrus Juicer (1, 10, 11, 14, 15):

- Cut the orange into two halves
- Press the half orange on the reamer
- Operate 15 seconds and then rest 15 seconds, shall not operate more than 10 cycles

#### Shredder (1, 9, 10, 11, 16, 17, 18/or 1, 9, 10, 11, 16, 19, 20):

- Choose the blade which you need
- Prepare 500g carrots or cucumbers, and cut into the size could through the feeding hole
- Operating the product with speed 1, and then put the carrots or cucumbers into the feeding hole, press the carrots or cucumbers with feed pusher. Operating until the carrots or cucumbers are cut (about 30 seconds). Please let the appliance cool down before next operation.

#### Shredder for mash potatoes (1, 9, 10, 11, 16, 21):

- Cook 500g of potatoes, and pre-cut the potatoes into the size could through the feeding hole
- Assemble the accessories
- Operating the product with speed 1, and then put the cooked potatoes into the feeding hole, press the cooked potatoes with feed pusher. Operating until the cooked potatoes are shredded (about 30 seconds). Please let the appliance cool down before next operation.

### Cleaning & Maintenance

	X	X	✓
	✓	✓	✓

	✓	X	X
	✓	✓	✓
	✓	✓	✓
	✓	X	X
	✓	✓	X
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	X
	✓	X	✓

- Means it can clean by water.
- Means it can clean by dish-washing machine.
- Means it can only clean by the dry cloth.

- If the product operating with abnormal noise, or shaking seriously. Please stop use this product, and send back to the service agent to check it. Never repair the product by yourself.

### Storage

- After use the product, please repack the product, and store it in a dry place and avoid sun exposure.
- Make sure the children could not reach the product.
- Keep the product dry before repack.

### Technical ratings

Rated voltage: 220 V - 240 V  
Rated frequency: 50 Hz / 60 Hz  
Rated power: 500 W

### ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.