



HGS-310
USERS'MANUAL

PRODUCT SPECIFICATION

MODEL	HGS-310
input voltage	220-240V
rated power	800w
max steam (g/s)	180g/min
steam last period	55min
tank capacity	2.5L
steam temperature	98℃

CLEANING AND STORAGE

- We recommend you follow this procedure at least once per week.
1. Turn the switch to "OFF" position.
 2. Unplug the unit from the power outlet.
 3. Allow the steamer to cool for at least 20 minutes.
 4. Remove the hose and clean the extension tubes, then set them aside.
 5. Remove and drain the water tank. Rinse the water tank with fresh water, and drain completely. Rinse the water filter back on the water reservoir.
 6. Wash the steamer by removing the drain plug and emptying the contents.
 7. Flush the unit by filling the water reservoir and the hot connector with fresh water and steaming completely.
 8. Repeat the cleaning step in a cool/dry place.

DIRECTORY

1. IMPORTANT SAFE GUARDS
2. PRODUCT PARTS
3. ASSEMBLY/USE INSTRUCTIONS
4. APPLICABLE PLACE
5. PRODUCT SPECIFICATION
6. CLEANING AND STORAGE
7. TROUBLE SHOOTING

IMPORTANT SAFE GUARDS

1. Please do not use power directly supplied to 220-240V-50/60Hz.
2. Do not operate another high voltage appliance on the same outlet of electrical installation.
3. Use the appliance only as described in the manual. Other uses not mentioned here cause fire or electric shock.
4. Do not remove the unit, power cord or plug while it is operating.
5. Check the extension tube, steam nozzle when the appliance is used or is near children.
6. Do not overuse the steamer without filling the water reservoir. Always check the water level before and during operation.
7. When the appliance is plugged into a power outlet, do not touch the metal parts, hot water or steam to avoid burns.
8. Do not touch the hot metal parts, hot water or steam to avoid burns.
9. When the appliance is plugged into a power outlet, do not touch the metal parts. Turn off the unit, clean the water tank and water filter before replacing the contents. For 20-30 minutes, clean the water tank and wash it before using.
10. After the operation is over, disconnect the power before filling or draining water. Be careful to avoid scalding water spilling from the water reservoir.
11. Longing use and from the outlet when you use, when standing unit from one location to another and before cleaning.
12. Do not place the unit in wet areas such as shower rooms, swimming or other heating facilities.
13. Do not operate the unit with a damaged cord, plug, after a malfunction or if exposed/damaged wire is present.
14. By disconnect, grip the plug and pull it from the wall outlet. Never drag the cord.
15. Do not use extension cords to avoid overheating and risk of fire.
16. The extension cord is subject to the water tank or it will cause damage. Disposal of an extension cord must be recommended.
17. This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be warned to ensure that they do not play with the appliance. Care must be taken when using the appliance due to the presence of electric current and the appliance must be kept dry and clean.
19. If the supply cord is damaged, it must be replaced by the manufacturer, the service agent or a similarly qualified person in order to avoid a hazard.
20. We suggest that you do not hang the clothes on the hanger when you are using garment steamer in the normal.

C. How to Iron clothes

1. The high temperature steam may soften the garment fabric. It is very difficult to iron the garment smoothly if only depends on the steam which the nozzle sprays. The most effective method is to use the garment steamer. The key point of product demonstration is to hold and pull the bottom of garment with the hand, make the garment surface as smoothly as possible.
2. Again place the steam nozzle on the garment, press the nozzle gently, then move the nozzle from the bottom to the top of the garment. Repeat the ironing floor and pull the strap by high temperature steam.
3. Group and lighter hot side of garment when ironing the bottom. Slowly slide the nozzle vertically from the bottom to top of the garment. Be careful of the hot steam from steam nozzle.
4. Press downwards for a longer time on the garment collar, finishing with more water steaming. Steam it back and forth from the bottom to the top.
5. Straighten the garment sleeve when ironing, press for a longer time on the sleeve flapping with water. Steam it back and forth from the bottom to the top.
6. Steam the back of garment after ironing the front.

APPLICABLE PLACE

Home clothes, also hotel and washing shop.

PROBLEM	REASONS	SOLUTION
The unit will not steam.	Water level is not enough or water tank is not connected.	Fill the water tank or connect the water tank.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.
The unit will not work.	The power cord is not plugged in.	Plug the power cord in.

TROUBLE SHOOTING

6. Open the cap cover clockwise and fit water tank the cap clockwise. (Figure 11 & Figure 12).



7. Install the water tank into the main body (Figure 13 & Figure 14).



8. Turning on the unit will be essential in advance in order to (Figure 15 & Figure 16).




PRODUCT PARTS



ASSEMBLY/USE INSTRUCTIONS

- A. Check the parts
- Open up the packages (check all the parts to make sure everything is available).
- | Name | Main body | Steam hose | Adjustable metal tube | Brush |
|----------|-----------|------------|-----------------------|-------|
| quantity | 1 | 1 | 2 | 1 |
- | Name | Hanger | Trousers rack | Fabric steam clip | Water tank |
|----------|--------|---------------|-------------------|------------|
| quantity | 1 | 1 | 1 | 1 |
- B. assembly step
1. Press down the lock button and insert the metal tube into the tube socket and lock it (Figure 1 & Figure 2).
 2. Install the clothes hanger on the top of the metal tube (Figure 3 & Figure 4).
-

3. Insert the lock (Figure 5) to adjust the steamer height and lock it (Figure 6).

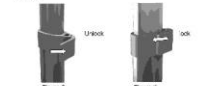

4. Insert the steam hose into the steam out socket and adjust it by turning the hose lock button (Figure 7 & Figure 8).



5. Install the brush or trousers clip on the steam nozzle (Figure 9) and the brush on the hanger (Figure 10).

