



HGS-410  
USERS'MANUAL

**PRODUCT SPECIFICATION**

MODEL	HGS-410
input voltage	220-240V
rated power	1555-1850W
max steam rate	36g/min
steam last period	55min
tank capacity	2.0L
steam temperature	90°C

**CLEANING AND STORAGE**

- We recommend you follow this procedure at least once per week.
1. Turn the switch to "0" position.
  2. Unplug the cord from the power outlet.
  3. Allow the steamer to cool for at least 20 minutes.
  4. Remove the hose and attach the extension tube, then set them aside.
  5. Remove and drain the water tank. Rinse the water tank with clean water, and drain completely. Press the water fill tank back on the water reservoir.
  6. Clean the steamer by removing the clean plug and wiping the contacts.
  7. Flush the unit by filling the water reservoir and the hose connector with fresh water and draining completely.
  8. Store in a cool, dry place.

**DIRECTORY**

1. IMPORTANT SAFE GUARDS
2. PRODUCT PARTS
3. ASSEMBLY/USE INSTRUCTIONS
4. APPLICABLE PLACE
5. PRODUCT SPECIFICATION
6. CLEANING AND STORAGE
7. TROUBLE SHOOTING

**IMPORTANT SAFE GUARDS**

1. Please be sure your electricity supply is 220V-240V-50/60Hz.
2. Do not operate another high voltage appliance in the same outlet of extension to avoid overload.
3. Use the appliance only as described in the manual. Other uses not recommended may cause fire or electric shock.
4. Do not immerse the cord, power cord or plug in water.
5. Do not leave the steamer unattended while it is in operation.
6. Close supervision is necessary when the appliance is used by or near children.
7. Do not operate the steamer without filling the water reservoir. Always check the water level before and during operation.
8. Do not try to hose on the ground (or wall).
9. Do not touch the hot metal parts, hot water or steam to avoid burns.
10. Move the appliance by grasping the telescopic pole. Do not touch the casters if they are hot. Turn off the Unit, drain the water tank and water reservoir before inspecting the casters.
11. Allow the appliance to cool completely for at least 20 minutes drain the water tank and reservoir before storage.
12. Always disconnect the appliance from the outlet before filling or emptying water. Be careful to avoid scalding water boiling from the water reservoir.
13. Unplug the cord from the outlet when not in use, when moving into from one location to another and before cleaning.
14. Do not place the unit or any parts near an open flame, cooking or other heating appliance.
15. Do not place the unit with a damaged cord, plug, after a malfunction or if dropped or damaged in any manner.
16. If disconnected, plug the plug and pin it from the wall outlet. Never plug the cord.
17. Do not use extension cords to avoid overheating and risk of fire.
18. No detergent can be added into the water tank or it will cause damage. Distilled or de-ionized water is recommended.

**C. How to iron clothes**

1. The high temperature steam can soften the garment fibers. It's very difficult to iron the garment smoothly if only depends on the steam which the nozzle emits. The smooth ironing is achieved by clever ironing technique. This key point is gradual determination to find and pull the fabric of garment with the hand, make the garment surface as smooth as possible.
  2. Right after the steam nozzle on the garment, press the nozzle gently. The nozzle will pull the fabric to the high temperature steam.
  3. Check and tighten the iron of garment when steaming the clothes. Steep a side to make vertically, from the bottom to top of the garment. It is essential to use steam from steam nozzle.
  4. Press downward for a longer time on the garment collar hanging with outside when steaming. Steam it back and forth from the bottom to the top.
  5. Steampress the garment where steaming, press for a longer time on the same hanging with nozzle. Steam it back and forth from the bottom to the top.
  6. Clean the back of garment after ironing the front.
- D. How to use the breath or trousers clip**
1. When you want to iron the clothes using the steamer with breath clip assembly the cloth as follow.
  2. When you want to iron the clothes using the steamer with trousers clip assembly the trousers clip as follow.

Home - clothes sleep head and waving shop.

PROBLEM	REASON	SOLUTION
Doesn't iron the clothes	Doesn't use the steam	Plug into electrical outlet
Doesn't iron the clothes quickly	Ironing temperature is not high enough	Adjust the temperature
Doesn't iron the clothes smoothly	Ironing temperature is not high enough	Adjust the temperature
Doesn't iron the clothes evenly	Ironing temperature is not high enough	Adjust the temperature
Doesn't iron the clothes quickly	Ironing temperature is not high enough	Adjust the temperature
Doesn't iron the clothes smoothly	Ironing temperature is not high enough	Adjust the temperature
Doesn't iron the clothes evenly	Ironing temperature is not high enough	Adjust the temperature

6. Open the top cover clockwise and fill water into the distriche.



7. Insert the steam nozzle into the top cover and lock it.



8. Turn on the water tank and it will be available in 40 seconds (Figure 10).



**PRODUCT PARTS**

 


**ASSEMBLY/USE INSTRUCTIONS**


Open up the package and check all the parts to make sure everything available.

Part Name	Quantity	Unit	Part Name	Quantity	Unit
Steam Hose	1	pc	Water Tank	1	pc
Adjuster Mark Tube	1	pc	Steam Nozzle	1	pc
Parts Seen Up	1	pc	Steam Hose	1	pc
Bush	1	pc	Water Tank	1	pc
Pylon Hanger	1	pc	Adjuster Mark Tube	1	pc

1. Insert the metal tube into the tube socket and lock it. (Figure 1)

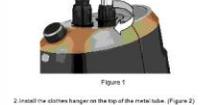

 2. Install the clothes hanger on the top of the water tank. (Figure 2)

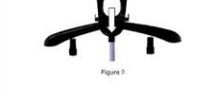

3. Check the neck (Figure 3), to pull the metal to a proper height and lock it (Figure 4).



4. Insert the steam hose into the steam out socket and tighten it by turning the hose lock clockwise. (Figure 5)



5. Insert the steam nozzle on the steam out tube, hang the nozzle on the hanger (Figure 6).

