

HB-948 说明书 210x145mm





2024.11.26 立宏小姚

Maximum Amount	Operate time	Rest time
800ml	1 min	1 min

Cleaning

- Always switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Don't touch the sharp blades.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand-held blender shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufacturer's instructions.
- Some foods, e.g. carrot, may discolour the plastic. Rubbing with a cloth dipped vegetable oil help remove discolouring.

The list of the marking symbol

V	Volt	Hz	Hertz
W	Watt	~	Alternating current
	Class II appliance symbol		
	Tested safety		Communate Europene
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.		

3



HomeElectric Instruction Manual

Hand blender



MODEL NO.: HB-948
220-240V~, 50Hz, 1200W

Hand-held blender

- A. Speed control knob
- B. Key "I" (low speed)
- C. Key "II" (High speed)
- D. Motor Unit
- E. Connector
- F. Blender Stick
- G. Blade attachment



Safety

1. Close supervision is necessary when and appliance near children.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.

General

- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand-held blender's shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufacturer's instructions.
- Never touch the blades while the machine's plugged in.
- Keep fingers, hair, clothing, and utensils away from moving parts.
- Unplug after use and before changing attachments.
- Never blend hot oil or fat.
- Don't let children or infirm people use the hand blender without supervision.
- Never use a damaged hand-held blender, Get it checked or repaired in your local place.
- Never put the power handle in water or let the cord or plug get wet-you could get an electric shock.
- Never let the cord touch hot surfaces or hand down where a child grabs it.

1

- Never use an unauthorized attachment.
- Young children should be supervised to ensure that they do not play with this appliance.

Important

- With heavy mixtures, don't use your hand blender for longer than 50 seconds in any four minutes period-it'll overheat.
- Only use your hand blender for its intended domestic use.

Before using for the first time

1. Remove all packaging.
2. Wash the parts: see 'cleaning'.

To use the hand blender with hand-held accessory

- You can merge liquids and solids into a blend.

For beaker blending

- Put the base/lid on the bottom of the beaker. (This stops the beaker sliding on the worktop.)
- Don't fill the beaker above 800ml

Setting the speed

- Press "I" for low speed, press "II" for high speed
- The required speed can also be selected by adjusting the speed control knob during the start-up process.

For saucepan blending

Take the pan off the heat and let it cool slightly, otherwise your hand-held blender could overheat.

1. Fit the power handle inside the blender shaft, turn and lock
2. Plug in. To avoid splashing, place the blade in the food before switching on.
3. Hold the beaker steady. Then press either speed button
Don't let liquid get above the join between the power handle and blender shaft. Move the blade through the food and use a stabbing action.
If your blender gets blocked, unplug before clearing
4. After use, unplug and dismantle.

! Warning:

—Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;

—Do not allow children to use the blender without supervision.

Processing guide

2