9.5*13.5cm





2.Twist left with some effort till it clicks





1.Press and hold the button



2.Twist right to remove













HDS-777

WARM TIP. Thank you for choosing this series of products! For the safety of you and others, please read the operation manual carefully and use the product correctly!

MULTIPLE TEMPERATURE & SPEED SETTINGS



5 in 1 Hot Air Hairdresser











Precautions

- Precautions

 A standard power socket must be used, and it must be used separately from other electrical appliances.

 Make sure that the power supply voltage used is consistent with the rated voltage marked on this product.

 Never leave the product when it is started, and turn off the power switch even if the product is only put down for a while.

 After use, the plug must be unplugged from the socket. When pulling out the plug, you must hold the plug and pull if out from the socket.

 In order to increase protection, it is recommended to install a residual current device (RCD) with a rated residual working current not exceeding 30mA in the electrical circuit of the bethroom power supply. Please consult the (RCD) installer. If the product 's power cord is damaged on other malfunctions occur, in order to avoid danger, it must be replaced by prefessionals from the manufacturer, its maintenance department or similar departments. Unauthorized disassembly is strictly prohibited.

 Do not use the product with wet hands.

 Do not use the product with wet hands.