

9*13.5cm

Cleaning and maintenance

⚠ Do not clean the stainless steel filter with water, otherwise it may cause failure. Use dry lint-free cloth, soft brush, toothbrush and other tools to remove the surface of the air intake filter and stainless steel filter.



After cleaning, insert the air inlet filter into the slot of the mounting handle. Hear a click, indicating that the air filter is installed in place.



06

Safety precautions

⚠ **Caution**
To ensure the correct and safe use of the product and avoid personal injury or property damage, read all the instructions and warnings in the manual carefully before using the product.

* Warnings

1. If the power cord is damaged, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments in order to avoid danger.
2. When using a hair dryer in the bathroom, unplug it after use, as it is still dangerous to approach water even if the hair dryer is switched off.
3. For added protection, it is recommended to install a residual current device (RCD) with rated residual working current not exceeding 30mA in the bathroom power circuit. Please consult your RCD installer.
4. Warning: Do not use this device near water bath, shower, wash basin or other appliances.
5. Do not cover the outlet and entrance when using, otherwise it will lead to combustion or mechanical damage.
6. Do not use this appliance near water.
7. Do not use a hair dryer near gas or other flammable objects.
8. Do not press the hair handle or put other inappropriate items into the hair dryer inlet and outlet, otherwise it will cause hair dryer damage, and even electric shock accident.
9. This device is not intended for use by persons with physical disabilities, sensory or neurological disorders, or inexperience. For use by persons (including children) who do not know how to use the equipment unless they are under the supervision and direction of the person responsible for their safety.
10. Wash your children and don't let them play with devices.
11. Do not use a hair dryer near breads, paper or other flammable materials, as this could cause a fire.

Meaning: "Do not use in a bath or shower"



* Forbid

1. Do not immerse the product in water.
2. Do not use this product in a bath or shower.
3. Do not transform, disassemble or repair the product by yourself.
4. Do not knock or drop the product. If the product is damaged due to collision or fall, please stop using it.
5. Do not use in the vicinity of petroleum gas or other flammable materials (such as volatile agent, paint thinner, spray, etc.), in order to avoid explosion and fire.

* Prompt

1. To avoid damage to the power cable, do not wrap the power cable around the product.
2. Do not use this product on infants and children to avoid burns.
3. Keep hair at least 10 cm from the inlet to avoid hair entering into the outlet, which may cause damage.
4. This product is only used to blow dry hair, do not use to blow dry shoes and clothes, so as to avoid causing fire.

07

Electromagnetic field

This product complies with all standards related to electromagnetic fields (EMF). Current scientific evidence proves that this product is safe if used correctly and operated according to this instruction manual.

Environment

When disposing of products, do not place them in the general household garbage dump, but take them to a government-designated recycling center. It's good for the environment.

Q&A

problem	cause	solution
	The power socket connected to this product is not powered off.	Make sure the outlet is plugged in.
This product doesn't work at all.	The product may overheat and therefore automatically power off.	Unplug the product and let it cool for a few minutes. Before turning on the power of the product again, please check the air outlet to ensure that it is not blocked by hair and other debris.
	The power supply voltage connected to the product may not be consistent with the product voltage.	Ensure that the voltage marked on the product type nameplate is consistent with the current supply voltage.

08



HomeElectric


HAIR DRYER

Instruction manual

HHD-4002

Usage method

This product will automatically close when overheated. Please unplug this product and let it cool for a few minutes. Before opening the product again, check the air inlet and outlet to make sure it is free of fluff, hair, etc.
- Before using the product, please make sure that the product is in the off state (the switch is at the bottom), insert the power plug, slide the switch, and switch to the suitable gear position.

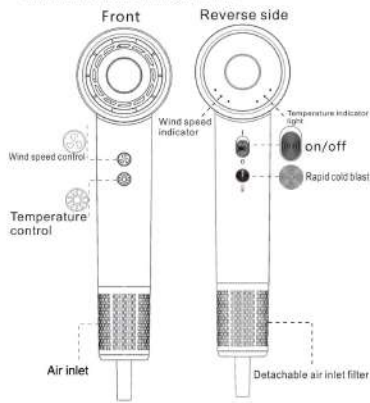


02

Gear function

Power/switch (push up and down)

Before connecting the power plug, ensure that the switch is in the off position.

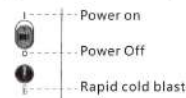

Temperature/wind speed control

Usage: After connecting the power supply, start the machine, and press the temperature or wind speed to start. Temperature has three levels of heat, wind speed has three levels of wind speed. Press and hold temperature for 1 second to switch between hot and cold.

Wind speed control

Temperature control (Press and hold for 1 second to switch between hot and cold mode)

Temperature/wind speed indicator

When the LED lights up, it indicates what you are using

Flow

Fast
Medium
Gentle

Temperature

High
Medium
Low



03

Alternating function of hot and cold air

● Cold air and hot air circulate automatically every 3 seconds.

● Prevent heat concentration and style your hair as you dry it.

● activate:


Boot operation in any temperature gear, long press the temperature gear key for 1 second to enter the corresponding wind speed gear cold and hot alternate function.

● Exit:

Press the temperature gear button once to exit.

Nozzle operation


Installation method: This product is equipped with a magnetic collection air nozzle, when using the air nozzle can be easily adsorbed the air force, can be rotated freely for easy use.

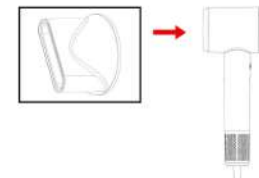

04

Cleaning and maintenance

⚠ The filter needs regular cleaning and maintenance to avoid debris blockage to ensure smooth air intake. Before cleaning the filter, ensure that the hair dryer is turned off and unplugged.

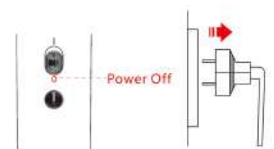

The air inlet filter is fixed with a buckle design. Hold the handle tightly and pull it down to remove the filter from the handle.



05