

- Put the gear box on the chopper bowl. Locate motor unit onto the gear box, and plug in.
- Press the switch to operate the chopper. During the processing, hold the motor unit with one hand and other for chopper bowl.
- After use, unplug it and take the motor unit from gear box; then remove the gear box.
- Carefully take out the blade. Handle the blade with care because it is sharp!
- Remove the processed food from the chopper bowl.

CAUTION: Chopping time does not exceed more than 30 S each time, and food quantity is under 210 g, keep off 2 minutes, after 1 time operating





HOW TO CLEANING

- Unplug the appliance.
- Do not immerse the motor unit in any liquid.
- The chopper gear box may be rinsed under the tap, but do not immerse it in water.
- Clean the blades and accessories immediately after using ,and avoid bacterial growth. Take care of the blades because they are too sharp !!

TECHNICAL DATA

220 V – 240 V~, 50 Hz, 500 W max.

The list of the marking symbol:

V	Volt	Hz	Hertz
W	Watt	~	Alternating current
	Class II appliance symbol		
	Tested safety		
	Communate Europeene		
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.		

3



HomeElectric HAND BLENDER

Operating Instructions



MODEL NO.:HB-945
220-240V~, 50Hz, 500W

- FOR HOUSEHOLD USE ONLY - INSTRUCTION MANUAL

PARTS NAME

- | | |
|---------------------------|---------------------------|
| 1. Multi speed controller | 2. Speed control button 1 |
| 3. Speed control button 2 | 4. motor unit |
| 5. blender stick | 6. Blade |
| 7. Chopper | 8. Chopping Blade |
| 9. Beaker | 10. Egg-Whisk |
| 11. Attachments Holder | |



IMPORTANT SAFETY RECOMMENDATION

- Read the instructions carefully before using your appliances for the first time.
- Make sure the rated voltage in your local place is conformity to the rating plate on the unit.
- Do not allow children to use the blender without supervision.

1

- Do not use outdoors. The appliance is household use only.
- Please always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not use the appliance if it has damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not allow long hair, scarves etc. to hang down over blender stick or whisk when they are in operation.
- Never put the appliance close to heat source.
- Please note: The blades of the appliance are sharp. Handle the blades with care.
- Before using your appliance first time, clean the various accessories carefully. Do not immerse motor unit in water or any liquid.
- Save the instruction for your future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CAUTION: Children should be supervised to ensure that they do not play with the appliance.

HOW TO USE STICK BLENDER

- Twist the stick blender onto the unit at clockwise until it is locked.
- Plug in the appliance.
- The beaker must be not more than 2/3 full to prevent over flowing.
- Always use the stick blender to blend ingredients together with water or other liquid.
- Do not use the stick blender to blend hard foods only, such as coffee bean, ice cubes, sugar, cereals, hocolate etc.
- Two speeds set for your different blending various ingredients.
- Do not operate the stick blender more than 1 minute at one time, allow a few minutes rest for next use.
- When you take out the stick from the motor unit, make sure of it unplugged.
- Its blade is sharp, handle it with care to avoid any hurt of you.

HOW TO USE WHISK

- Turn the whisk onto the motor unit at clockwise until it is locked.
- Plug in the appliance.
- Two speeds set for mixing eggs or creams etc. In operation, please take care of your long hair or scarves etc. hanging down over the rotating whisk to avoid any damage to you.
- After using it, please do not press the switch to avoid liquid ingredient splashed to make your clothes or table dirty.
- Operate whisk each time for not more than 1 minutes, otherwise the motor will be burnt if it is performed long time.
- Always unplug it after your using or cleaning.

HOW TO USE CHOPPER

- Place chopping blade on the center pin of chopper bowl.
Fill in the food in chopper bowl, such as meat, cheese, onions, herbs, garlic, carrots, almonds, prunes etc.
Peanut using 210 g one time.

2