


**INSTRUCTION MANUAL**

HAND MIXER

HM-35



**INSTRUCTION MANUAL**

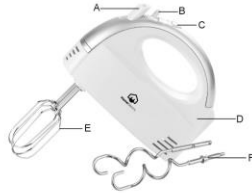

A. Eject B. speed control C. Turbo D. housing E. Beaters F. Hooks

**IMPORTANT SAFETY RECOMMENDATION:**

1. Read the instructions for use carefully before using your appliance for the first time.
2. Never leave the appliance with its reach of children without supervision. The use of this appliance by young children or by disabled person must always be supervised.
3. Don't use outdoors. Your appliance is intend solely for domestic use and within the home.
4. Don't use your appliance if it has been damaged. You should contact an approved service centre.
5. Never place the appliance, the power cable or water in any other liquid.
6. Don't allow the power cable to hang down in reach of children.
7. Never touch the beaters and dough hooks. When the appliance is operating, don't allow long hair, scarves etc. to hang down over the accessories when they are in operation.
8. Unplug the appliance before handling it in any way (fitting and removed of accessories.)
9. Never fit accessories with different functions at the same time. (Dough hooks and beater etc.)
10. The power cable must never be close to or in contact with the hot parts of your appliance. Close to a heat source or resting on sharp edges.
11. If the supply cord is damaged, the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard, must replace it.
12. This appliance is not intended for use by persons (including children) with reduced physical,

**Please read this booklet carefully before fixing and using  
And save it for future reference**

sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

13. Children should be supervised to ensure that they do not play with the appliance.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
15. Please cut off the power when nobody use it or before pull down, fix and clean it.
16. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
17. The instruction manual should be included operation time of attachment.
18. Please cut off the power when you want to change addition parts or similar parts during using.
19. It should have a instruction for keeping off hooks interfix.

**HOW TO USE THE APPLIANCE**

**Beaters and dough hooks**

1. Insert the beaters or dough hooks until they are locked into place. Always insert the accessory equipped with a toothed crown into the opening indicate on the appliance by a crown which is similarly toothed.
2. Plug in the appliance.
3. Depending on the quantity to be prepared. Place the ingredients in an appropriate container.
4. Plunge the beaters or hooks into the container and start the appliance by turning the control knob to the right.
5. Turn the control knob to the right in "1"- "5".
6. Depending on the model, the appliance may be equipped with a turbo button, which allows your appliance.
7. When you have finished using it, reset the control knob to position "0".
8. Unplug the appliance.
9. Eject the beaters or dough hooks by pushing the eject handle.

**MIXING GUIDE**

SPEED	DESCRIPTION
1-2	For mixing dry ingredients with liquids, folding whipped egg whites and cream into mixtures, stirring gravies and soups and mashing vegetables.
3-4	For mixing cake mixes, puddings or batters. For using the dough hooks when mixing dough or heavier cake mixes. For creaming together shortening and sugar.
5	For whipping cream, evaporated or powdered milk, egg whites or whole eggs.
TURBO	For mixing minced meat or kneading heavy dough. Same speed "5"

**CAUTION:**

1. After 3 minutes continuous use, allow a few minutes rest before next use.
2. Do not operate more than 3 minutes at one time.

**HOW TO CLEANING**

1. Unplug the appliance.
2. Clean the body of the appliance using only a damp cloth.
3. Clean the beaters or dough hooks under running water or in the dishwasher. Rinse and dry.
4. The chopper gear box may be rinsed under the tap, but do not immerse it in water.
5. Clean the attachments in a sink **CAUTION:** The attachment is very sharp!
6. On completion of using your appliance it is strongly recommended that you clean the accessories immediately. This will remove any clinging food from the accessories. Preventing bath drying out of the residue food. Making cleaning easier and the possibility of bacterial growth.

Specification :  
220-240V, 50Hz 200W