

13cm

13cm

When using your Hot Plate, basic safety precautions should always be followed, including the following:

- Never immerse the Hot Plate in water or any other liquid.
- Oil and fat being heated are not to be left unattended without adult supervision.
- Do not touch the surfaces or the Hot Plate when in operation, as they get hot.
- The Hot Plate is designed only for the heating and cooking of food, and must only be used with cooking utensils placed on it.
- The Hot Plate must be turned to "0" setting and disconnected from the power outlet when not in use.
- Cooking utensils, regardless of their size, should not project beyond the Hot Plate or intrude into the area of close proximity of the controls.
- It is dangerous to operate any electrical product with a damaged cord or plug, or after the product malfunctions or is dropped or damaged in any manner. Return the complete product to the place of purchase for inspection and repair.

**HOW TO CARE FOR YOUR HOT PLATE**

- Disconnect the Hot Plate from the power outlet
- Do not immerse the Hot Plate in any liquid.
- Do not allow the cord to touch any hot surfaces of the Hot Plate.
- Clean the painted surface with a damp soft cloth and mild household cleaning powder.
- Baked on marks on the circular Hot Plate can be removed with a household cleaning powder. Turn the unit on for a moment to dry after cleaning.
- Commercially available Hot Plate cleaners are recommended to preserve the natural finish of the Hot Plate.

-The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

-Children should be supervised to ensure that they do not play with the appliance.

-The surfaces are liable to get hot during use.

-The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.

-This appliance is intended to be used in household and similar applications such as:

-staff kitchen areas in shops, offices and other working environments;

-farm houses;

-by clients in hotels, motels and other residential type environment;

-bed and breakfast type environments

**REMARK:**

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard

**READ AND SAVE THESE INSTRUCTIONS**



HomeElectric

HOT PLATE

**INSTRUCTIONS MANUAL**



HP-1010



HP-1012

**MADE IN CHINA**

**HOUSEHOLD USE ONLY**

19.3cm

**BEFORE FIRST USE**

Read and follow all the instructions in this "Use And Care" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS", "FOR YOUR SAFETY" and "SERVICE" statements.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

**NOTE:** The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

**TECHNICAL DATA**

HP-1010	□
230V~50Hz 1500W	
HP-1012	□
230V~50Hz 1500W	

**IMPORTANT SAFEGUARDS**

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

**WARNING** - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Close supervision is necessary when the product is used by or near children or invalids. Do not allow children to use it as a toy.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowl, swimming pool etc. Where the likelihood of immersion or splashing could occur.
- Do not operate or place any part of this product on or near any hot surfaces (such as a gas or electric burner or hot plate or in a heated oven).
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug-do not pull on the cord.
- Avoid contacting hot surfaces.
- Do not use the appliance for other than its intended use.
- Do not leave the appliance unattended when switched on.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- This product is intended for normal domestic/household use only.

19.3cm

**READ AND SAVE THESE INSTRUCTIONS**

 
**HOW TO USE YOUR HOT PLATE**

Before using your Hot Plate for the first time, turn the Hot Plate on the highest setting for 3 to 5 minutes to condition the protective coating. This should be the only time the Hot Plate is turned on without a cooking utensil on it.

For the most efficient operation of your Hot Plate the cooking utensils used should have a solid base and be as even as possible, and with a diameter of approx. 18 to 20cm and a maximum capacity of 1.5litres (1500W hot plate), and a diameter of approx. 15 to 17cm and a maximum capacity of 1L (800W hot plate). The base diameter of cooking utensils smaller than the diameter of the Hot Plate should not be used.

Cooking utensils, regardless of their size, should not project beyond the Hot Plate or intrude into the area of close proximity of the controls.

Utensils with convex, concave or uneven bottoms should not be used.



**OPERATION OF CONTROL**

Turn the controls to the recommended position marked to achieve the desired temperature. Use this guide as a reference.

**NOTE:** Both hot plates can be used at the same time, however care must be exercised to prevent the cooking utensil handles from protruding over the adjacent hot plate.

**IMPORTANT:** When not in use always turn the controls to the "0" position and disconnect from the power outlet.



1. For simmering of delicate foods, and thickening sauces, etc.
2. Slow cooking
3. For simmering large quantities
4. Shallow frying of meat and pan dishes
5. To bring all dishes to rapid heat
6. To bring all dishes to a boil.

**Note:** The lamp will go off when the Hot Plate reaches the selected temperature, and will cycle on and off to maintain the temperature.

**FOR YOUR SAFETY**