





HomeElectric

INSTRUCTION MANUAL

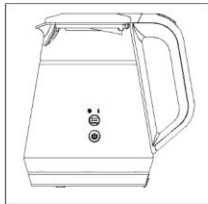


KK-552

360 DEGREE ROTATION
AUTOMATIC CORDLESS KETTLE
MADE IN P.R.C.

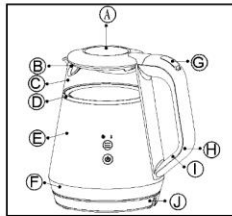

- Ⓐ Cover
- Ⓑ Filter
- Ⓒ Body
- Ⓓ Decoration line
- Ⓔ PP housing
- Ⓕ Bottom
- Ⓖ Cover starter
- Ⓗ Handle cover
- Ⓘ Handle
- ⓫ Base

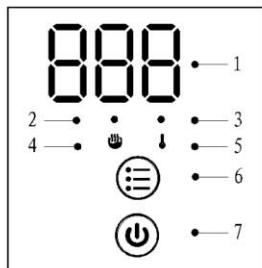

1. Temperature Icon
2. Heating indicator light
3. Keep warm indicator light
4. Heating Icon
5. Keep Warm Icon
6. Function setting button
7. Power button (On /OFF)

Operation Instruction

Please check whether your socket and power is suitable for this product before use.
Do not exceed the maximum line of the mark(1000ml).
It is suggested to boil twice to clean the inner pot when first use.

1. Place the kettle on a horizontal surface for use.
2. Open the lid and pour water into the kettle.
3. Connect with power, enter the setting interface, and press the button for boiling water (you can select the setting temperature you need under the setting menu).



When using your kettle, basic safety precautions should always be followed. Including the following:

1. Read all instruction carefully and thoroughly before any operation of the kettle.
2. Close supervision is necessary when any appliance is used by or near children.
3. Before connecting the kettle, check whether the voltage indicated on the appliance/understand of kettle and base unit corresponds with the main voltage in your home. If it is not the case, contact your dealer and not use the kettle.
4. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
5. Do not overfill as boiling water may be ejected, the maximum level indicator. Fill with cold water only.
6. To avoid against fire, do not operate in the presence of explosive and/or flammable fumes. Such as do not operate or place any party of this appliance on or near gas and electric burner or in a heated oven.
7. Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
9. If the cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any way, return the appliance completely to your nearest authorized service agent for examination, repair or adjustment.
10. Avoid touching the surface of the hot kettle - use the handle and knob.
11. To avoid possible steam damage, use face the cover when operating the kettle.
12. If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
13. To avoid scalding, always ensure the lid is correctly positioned before operation.
14. Remove and replace the lid carefully when hot.
15. Exercise caution must be used when moving the kettle containing hot water. Never fill the kettle by its lid. Always use the body handle.
16. Do not switch your kettle on if it is empty.
17. To protect from electrical hazard, do not immerse this kettle, power base or cord set in any liquid.
18. Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
19. To protect against fire, do not operate in the presence of explosive and/or flammable fumes.
20. While the water boiling or in the short time after the water boils, please be sure that don't attempt to open the cover for avoid the steam scalding your hand.
21. Please avoid the liquid splashing in the LCD panel and the power key place in the operating process. Because the water possibly can damage the product, causes the function to be abnormal.
22. Please do not have to add substances the maximum water volume the water, because this has the possibility to damage the product, causes the product movement to appear abnormally.
23. Please regular clean descale or poe between residues, because this possibly can affect the normal use of the product.
24. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
25. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user

maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Save the instruction
Basic operation:

- ① Temperature Icon: Display the real temperature and the setting temperature.
- ② Heating indicator light: This indicator lights up when the water is heating.
- ③ Keep warm indicator light: This indicator lights up when the water is keep warm.
- ④ Heating Icon: When the indicator light above the heating icon is light up, it is in the state of heating.
- ⑤ Keep warm Icon: When the indicator light above the keep warm icon is light up, it is in the state of keep warm.
- ⑥ Function setting button: Short press, select the request temperature: 80 70 88 90 100°C.
- ⑦ Long press: For 2 seconds, the indicator light above the light up.
- ⑧ Use the same (long) after selecting the required temperature through the temperature indicator function. It automatically enters the keep warm state, the most preservation time is 2 hours, when the water temperature is lower than the set value of about 5 degree, reheat boiling. This cycle runs until the keep warm time runs out.

(Long press) For two seconds, cancel the keep warm state)

Power button (On/Off)

In the power state, short press the button gives a sound of "fit", and the display show 100 °C, the indicator light show.

Light up, the screen displays the current real-time temperature, and enters the state of hoting water. After the water boils, the heater gives a warning sound of "fit". If the kettle is powered on, no operation is performed within 1 minute, the kettle automatically enters the standby state.)

In the state of keep warm after boiling water to the set temperature, the function of memory starts. Within ten times of kettle lifting, the water temperature of the kettle should not be less than 8 degrees below the set value for each time, and the memory is effective, that is, the keep warm continues to work and the time of keep warm continues to the last time. Otherwise exit the keep warm.

How to care for your kettle
Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove mineral spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders. Never immerse the kettle in water or other liquids.
From time to time, depending on the nature of your water supply, a hollow scale deposit is naturally formed and can be found mostly adhered to the heating element - thus reducing the heating efficiency.
The amount of hollow scale deposited (and subsequently the need to clean or descale) largely depends on the water hardness in your area (the frequency with which the kettle is used).
Hollow scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

- Descaling**
Under normal use, it is generally necessary to clean and descale at least twice a year; the specific method is as follows:
1. Mix daily vinegar with water in a ratio of 1:2, fill the kettle (the highest water level) to start boiling water and wait for the kettle to boil.
2. Leave the mixture for 12 hours.
3. Pour off the mixture.
4. Fill clean water to the highest water level and restart the boil function.
5. Pour off the boiling water, the scale and mixture has been removed and the cleaning of the kettle is completed.

Electric data: AC 220-240V 50-60Hz 900-1100W 1.0L

GUARANTEE CARD

بطاقة كفالة

شركة راندا

ITEM <small>نوع الجهاز</small>	MODEL NO. <small>رقم الموديل</small>
ELECTRIC KETTLE	KK-552
DATE OF PURCHASE <small>تاريخ الشراء</small>	SERIAL NO. <small>رقم التسلسل</small>
	55203240001
BUYER'S NAME & ADDRESS <small>اسم المشتري وعنوانه</small>	BUYER'S STAMP <small>ختم المشتري</small>

GUARANTEE CARD

Warranty: After the receipt of the product on our limited Guarantee from the date of purchase. Against all manufacturing defects a standard and maintenance of brand defective, it should be returned by the user and in the nearest authorized distributor and the unit will be repaired or replaced at the user's free of charge. During the guarantee period, which can be followed by the buyer, the user should be accompanied by the unit. All completed and changed by an authorized dealer along with the unit cover. The Guarantee does not cover accidental damage, damage due to misassembly or abuse, or repairs made by unauthorized persons. It specifically excludes claims of expenses for labor, installation or transportation charges.

Warranty: And to authorized will make every effort to carry out repair/replace parts and replacement under this guarantee. However, they shall not be liable for a specific time.

شركة راندا وشركة هوم اليكتريك، يضمنان جودة المنتج، كما يضمنان سلامة المنتج في حالة حدوث أعطال أو تلفات خلال فترة الضمان. ومع ذلك، لا يضمنان سلامة المنتج في حالة حدوث أعطال أو تلفات خارجة عن نطاق الضمان، مثل التلف الناتج عن سوء الاستخدام أو الاستخدام غير السليم.

شركة راندا وشركة هوم اليكتريك، يضمنان جودة المنتج، كما يضمنان سلامة المنتج في حالة حدوث أعطال أو تلفات خلال فترة الضمان. ومع ذلك، لا يضمنان سلامة المنتج في حالة حدوث أعطال أو تلفات خارجة عن نطاق الضمان، مثل التلف الناتج عن سوء الاستخدام أو الاستخدام غير السليم.

KASHIM AND WAHAB TRADING CO.
Tel: 009624200002
Service-center@kashim.com

شركة راندا وشركة هوم اليكتريك، يضمنان جودة المنتج، كما يضمنان سلامة المنتج في حالة حدوث أعطال أو تلفات خلال فترة الضمان. ومع ذلك، لا يضمنان سلامة المنتج في حالة حدوث أعطال أو تلفات خارجة عن نطاق الضمان، مثل التلف الناتج عن سوء الاستخدام أو الاستخدام غير السليم.