


- On/Off/Enter button
- Coffee icon
- Mute icon
- LCD display
- Keep warm icon
- Heating icon
- Tem Hold button
- °C/°F button
- Mute button
- Custom temp for Coffee button
- Temperature set button

Please check whether your socket and power is suitable for this product before use.

- Place the kettle on a horizontal surface for use.
- Remove the lid and pour water into the kettle.
- Turn on the power, press the On/Off button, turn the knob to select the target temperature and it will automatically heat to the target temperature.
- Take off the kettle for brewing.

- Check operation is necessary when any appliance is used or non-usable.
- Before connecting the kettle, check whether the voltage indicated on the appliance is suitable for the kettle and the voltage in your home. If it is not the case, please your dealer and do not use the kettle.
- Switch off and unplug the kettle before filling, emptying or cleaning, so when not in use. Do not overfill or boiling water may be spilled. Do not reuse hot water. Fill with cold water only.
- Travel against fire. Do not operate in the presence of explosive and/or flammable fumes. Such as do not operate or place any part of this appliance on or near gas and electric burner or in a heated area.
- Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
- Never touch the cord as this may damage the cord and potentially cause a risk of electric shock. If the cord is plug is damaged or after the appliance malfunctions or is damaged or damaged in any way, please the appliance cordlessly by your nearest professional service agent for examination, repair or adjustment.
- Avoid touching the surface of the kettle, hot handle and knob.
- To avoid possible electric damage, do not touch the kettle when operating the kettle.
- If operated on wood furniture, use appropriate pad to prevent damage to the furniture.
- To avoid scalding, always ensure the lid is correctly positioned before operation. Scalding may occur if the lid is removed while boiling.
- Remove and replace the lid carefully when hot.
- Children should not be used when operating the kettle containing hot water. Never fill the kettle by its lid. Always use the body handle.
- Do not touch your kettle as it is in use.
- To prevent from electrical hazard, do not immerse this kettle, power base or cord set in any liquid. Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
- To prevent against fire, do not operate under pressure of explosive and/or flammable fumes.
- While the water boiling or in the short time after the water boils, please be sure that don't attempt to open the cover lid to avoid the steam scalding your hand.
- Please avoid the liquid splashing on the LCD board and the ground by place in the operating process. Because the water possibly can plug on the product, causes the function to be unusual. Please do not leave it with the supplied base unit. Do not use the base unit for other purposes. Please do not leave it with the supplied base unit. Do not use the base unit for other purposes. Please do not leave it with the supplied base unit. Do not use the base unit for other purposes.
- Please replace clean drinks or any hot water residues, because this possibly can affect the normal use of the product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised by the person who is responsible for their safety.

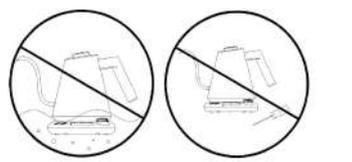

- Basic operation:
- On/Off/Enter button: Under steady state, single press to turn on, after function selection, double press to start heating, during heating process, if press again, will power heating and into steady state, press for 3 seconds to turn off.
  - Coffee icon: When the coffee icon ☕ is shown on the display, it means select

The Custom temperature mode for espresso coffee: 91°C/196°F

- Mute icon: When the 🔇 is shown the display, means mute water mode.
- LCD display: Show the real-time temperature, set temperature, keep warm time and working status (the bar icon show the temperature percentage gradual).
- Keep warm icon: LCD display show the icon ☕, means keep warm status.
- Heating icon: LCD display show the icon 🔥, means heating mode.
- Hold button: Single press, turn the knob to set keep warm time which errors 10 minutes as level. (Add clockwise, subtract counterclockwise) Press/Down, this function is valid for both standby or working condition, when keep warm for 100°C, it will be reheat when water 5°C lower than 100°C. Keep warm for Other temperature, it will be reheat when water 2°C lower than set temperature.
- °C/°F transfer button: Press 3 seconds transfer into °F mode, and press 3 seconds again, back to °C mode (it is valid under both standby and working state).
- Mute button: Press 3 seconds transfer into Mute mode and on LCD display show icon 🔇. Without sound when press button. Press 3 seconds again, reenter normal mode with sound.
- Custom temp for Coffee button: Single press this button, the

When using your kettle, basic safety procedures should always be followed, including the following:

- Read all instructions carefully and thoroughly. Before any operation of the kettle.

1. Pour off the boiling water, the scale and residue has been removed and the cleaning of the kettle is completed.

Electric data: AC220-240V 50-60Hz 900-1100W 1.0L

Icon and real time temperature will show on the LCD display (turn the knob, three preset temperature 90°C/195°F/90°C is available for your choice)

Temperature set button: turn the knob, when under °C mode, the set temperature is every 5°C on each level. 90°C (195°F), subtract counterclockwise/adjust more 90°C (195°F). When under °F mode (90°C (195°F), subtract counterclockwise/adjust more 18°F (10°C).

Steady state lasts 5 minutes, the kettle automatically turn off, the LCD display and all lights are off. At this time, press any button or rotate the knob to restore the product to the standby state.

When dry boil happened to the kettle, it will stop heating and enter steady state.

Power function: If the kettle is lifted when the electric kettle is working and put back within 10 minutes to continue the working state. If it is put back after 10 minutes, it enter the power-on state automatically. The setting light of the On/Off/Enter button will keep on, but the working light of the LCD screen and other buttons will be off.

How to use for your kettle: When the content of the kettle with a well, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive cleaning pads or powders. Never immerse the kettle in water or other liquids. From time to time, depending on the nature of your water supply, a descaled scale deposit is naturally formed and can be found mainly adhered to the heating element, thus reducing the heating efficiency. The amount of hard scale deposit and subsequently the scale clean or residue (largely depends on the water hardness or your use the frequency with which the kettle is used). Boiled water is not harmful to your health. But if poured into your beverage, it can give a secondary taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

Descaling: Under normal use, it is generally necessary to clean and descale at least twice a year, the specific method is as follows: 1. Mix daily dilute with water in a ratio of 1:2. Fill the kettle (the highest water level) to start boiling water and wait for the kettle to boil. 2. Leave for 10 minutes for 12 hours. 3. Pour off the residue. 4. Fill clean water to the highest water level and restart the boil function.

## GUARANTEE CARD

بطاقة كفاية

شركة زاندة

ITEM: ELECTRIC KETTLE	MODEL NO.: KK-553	Date of purchase: 55301250001
DATE OF PURCHASE:	SERIAL NO.:	BUYER'S NAME & ADDRESS:
	55301250001	BUYER'S STAMP:

**GUARANTEE CARD**

This card is provided to the owner of the product as proof of purchase. It is valid for the duration of the warranty period. The warranty period is 12 months from the date of purchase. The warranty is void if the product is used for purposes other than those intended. The warranty is also void if the product is damaged by misuse, neglect, or accident. The warranty is also void if the product is repaired by unauthorized personnel. The warranty is also void if the product is used in a manner that is not recommended by the manufacturer. The warranty is also void if the product is used in a manner that is not recommended by the manufacturer. The warranty is also void if the product is used in a manner that is not recommended by the manufacturer.

شركة زاندة تقدم هذه البطاقة كدليل على عملية الشراء. البطاقة صالحة لمدة 12 شهرا من تاريخ الشراء. البطاقة غير صالحة إذا تم استخدام المنتج لأغراض غير تلك المقصود منها. البطاقة غير صالحة إذا تم إهمال المنتج أو سوء استخدامه. البطاقة غير صالحة إذا تم إصلاح المنتج بواسطة أشخاص غير مؤهلين. البطاقة غير صالحة إذا تم استخدام المنتج بطريقة غير صحيحة أو بطريقة غير موصى بها من قبل الشركة. البطاقة غير صالحة إذا تم استخدام المنتج بطريقة غير موصى بها من قبل الشركة. البطاقة غير صالحة إذا تم استخدام المنتج بطريقة غير موصى بها من قبل الشركة.

شركة زاندة والتجارة  
00961200002  
www.homeelectric.com