

HomeElectric
INSTRUCTION MANUAL
ELECTRIC TOASTER OVEN



MODEL NO.: HK-60

Supply Connection: Type Y

SPECIFICATIONS: 230V~50Hz 2200W


Before using this oven, please read this instruction manual completely.

1

Important Safeguard:

When using electrical appliances, basic precautions should always be followed, including the following: **Read all instructions before using this appliance.**


CAUTION!

1. Do not touch hot surfaces, use handles or knobs.
2. Close supervision is necessary when any appliances are used by or near children.
3. The temperature of accessible surface may be high when the appliance is operating.
4.  Hot surface
5. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. If supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
8. Repairs danger: electrical appliances must only be repaired by authorized specialists, because damages can occur by non-authorized repairs. In the case of a repair, contact your retailer or manufacturer.
9. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
10. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
11. When operating the oven, the rear surface should be as close to the wall as possible. For other surface, keep at least four inches of space away from the wall to allow for adequate air circulation.
12. Do not operate appliances with damaged cord or plug or after the appliances malfunctions, or has been damaged in any manner. Return appliances to the nearest Authorized Service Center for examination, repair, or adjustment.
13. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquid.
14. Do not let cord hang over edge of table or counter, or touch hot surfaces.
15. The use of accessory attachments not recommended may cause hazard or injury.
16. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
17. Lifting plug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning.
18. To disconnect, turn the control to OFF, then remove the plug, always hold the plug, but never pull the cord.
19. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
20. Do not cover any part of the oven with metal foil.
21. Do not clean with metal scouring pads pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
22. Never leave the appliances unattended while broiling or toasting.

2

23. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
24. A fire may cause if the oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation. Do not store any item on the oven during operation.
25. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
26. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
27. Do not store any materials, other than recommended accessories, in this oven when hot oven.
28. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
29. Do not use outdoors.
30. Do not use appliance for other than intended use.

NAME OF PARTS:

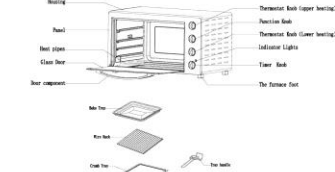

OPERATING INSTRUCTIONS

1. Put the oven on a plain plate. Then plug in the power supply.
2. Prepare the food which is going to be baked in a tray, and regulate the temperature, time and power level, then plug in to preheat the oven. Put the tray with handle into the oven at the fixed temperature.
3. Spread the tray with eatable oil before putting preparation in it to provide again stickiness.
4. One tray once time ensure the food to be baked well distributed.
5. In the course of baking, watch the food from glass door. To the chunk of food. It is better to turn it over once or twice. Open the door when need turning or moving. But the door must be shut immediately.
6. Push all the "OFF" button after baking pull off the plug. Take out of the food carefully.

Helpful Hints

Do not worry about the smoke for the first operating, as it is normally for the first heating, and will disappear within 20 minutes. In general, it is not necessary to preheat the oven. But you may better

3

results if you heat the oven before cooking some delicate meats, such as rare medium meat and cakes.

TIMER OPERATION

Turn the timer to choose timer for cooking

HOW TO USE THE CONVECTION FUNCTION

It can choose the convection time and temperature of heating. This convection control works only when function control set on Convection switch position.

HOW TO BAKE

1. Place the removable rack into the desired position.
2. Place the bake pan on the wire rack. Shut off the oven door.
3. Turn the timer dial to the desired cooking time.
4. Turn the thermostat dial for the desired temperature.
5. When finished baking, turn the time dial till position "OFF" to switch off the oven.

HOW TO BROIL

1. Insert the removable wire rack with food and the all-purpose pan.
2. Keep the door half open.
3. Turn the thermostat dial to the desired broiling time.
4. When finish broiling, turn the timer dial till position "OFF" to switch off the oven.

HOW TO TOAST

1. Set the temperature control to 230
2. Place food to be toasted on the Bake Rack.
3. Turn the Time Control to desired darkness. Bell will ring to signal the end of the Toast cycle.
4. When finish cooking, turn the timer dial till position "OFF" to switch off the oven.

COOKING TIPS

1. Before putting food in the oven on the grill sheet.
2. Place the drip tray under the grill sheet to avoid oil dripping inside the oven.
3. If the food is oily such as roast chicken etc, use two pieces of aluminum foil, put one piece on the drip tray and use another one to cover the food. This avoids oil splashing during operation.

MAINTENANCE AND CLEANING

1. Disconnect the oven by taking out the plug from the outlet.
2. Always clean the fixed and rotated parts of the oven after using every-time. Keep the oven open to let it dry.
3. Ensure that all acidic materials (detergent or oil) are cleaned immediately.
4. The oil trays and grill sheets can be cleaned with detergent and water. Preferably use dry cleaning powders to clean inner & outer sides of the oven.

Correct disposal of this product



This marking indicates that this product is an appliance of which the waste processing life cycle is governed by the framework of the 2002/96/EC Directive of 4 July 2002 on Waste Electrical and Electronic Equipment (WEEE), and it should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

4