 



OSCILLATION CONTROL

To make the fan oscillating, Press the oscillation knob located on the top of the motor housing. To get the directional airflow, press the oscillating knob, once more. (Figure 5)



TILTING CONTROL

 Unscrew the tilting knob, adjust the fan head to the desirable angle by holding the fan head, then tighten the knob... (Figure 6)



MAINTENANCE INSTRUCTIONS

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is required.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor housing free of dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before unplug. Do not disassemble the fan to remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent. Do not use any abrasive detergent or solvents to avoid scratching the surface.
4. Do not allow water or any other liquid in to the motor housing or interior parts.
5. If the power cord is damaged, it is strongly recommended to request a specialist to handle.



 
HomeElectric

Users' Manual

MODEL:HSF-1822/HSF-1823
HSF-1828/HSF-2025

(Pls. Read and save these instructions carefully)

Assembly diagram:

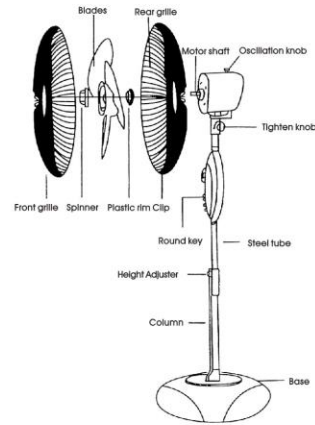

21X28.5CM A面

RULES FOR SAFE OPERATION:

1. To be familiar with the fan operation, please read all these instructions carefully before use.
2. Please match the power with the rated voltage and frequency of fan.
3. Please not insert fingers, pencils, or any other objects through the grille when the fan is running.
4. Disconnect power when moving fan.
5. Unplug the power plug before cleaning the fan.

 
OVER-HEAT PROTECTION FUNCTION

A thermostat was built-in motor. The fuse will be auto-cutout when motor temperature exceed the limit caused by any accidents. So plastic pieces will be well protected from burning out and distortion.

ASSEMBLY INSTRUCTIONS

BASE AND PILLAR ASSEMBLY

1. Take out base and pillar part from the carton.
2. Revolve the height adjuster anti-clockwise out, draw the steel tube out of the pillar. Then revolve the height adjuster clockwise to fasten it.
3. Locate the pillar proper into the base, take the screw nut from the plastic bag and fit it to the pillar from the bottom of the base and fasten it.
4. Adjust the height adjuster to meet your requirement of the height of the wind sending.



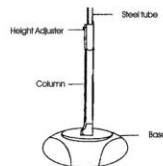


FAN BODY AND COLUMN ASSEMBLY:

Unscrew the fixing knob on the back of the bottom of fan body, emptied the hole in the bottom of fan body. Put extension column into the hole of the fan body, then tighten the fixing knob.


BLADE AND GRILLES ASSEMBLY

   1. Remove the spinner and the plastic nut from the front side of the motor shaft then tighten the plastic nut. Take the plastic rim out of packing carton, slip the ring of the rear grille into the deep slot of the plastic rim, screw the bolt in the joint of the rim properly. (FIGURE 1)
2. Discard PVC sleeve on shaft. Insert the blade into shaft, make sure the stopper pin is clipped in to the groove of the blade. Screw the spinner counter clockwise to tighten the blade. (FIGURE 2)
3. After put the center piece of the front grille upright, slip the ring of the front grille into the another slot of the plastic rim, tighten the bolt in the joint of the rim by a screwdriver. (FIGURE 3)



OPERATION INSTRUCTION

 Speed control please use "speed" switch to turn on/off the fan and adjust the speed by push the switch to number-in-dicating. (FIGURE 4)



0-off 1-Low 2-Medium 3-High

21X28.5CM B面