

OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. The appliance is not intended for use by young children or infirm persons without supervision.
6. Young children should be supervised to ensure that they do not play with the appliance.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliances to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
9. The use of accessory attachments, not recommended or sold by the appliance manufacturer, may cause hazards.
10. Do not use outdoors.
11. Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot substances.
14. To disconnect, remove plug from wall outlet.
15. Do not use appliance other than for its intended use.
16. If the external flexible cable or cord of this appliance is damaged, it shall be exclusively replaced by the manufacture or his service agent or a similar qualified person in order to avoid a hazard.
17. This appliances is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
18. This appliance is not intended to be operated by means of an external timer or separate remote-control system

SAVE THESE INSTRUCTIONS.

This appliance is for household use only.

No user-serviceable parts inside. Refer servicing to qualified service personnel.

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. An extension cord may be used with care, however, the marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled by children or tripped over.

DO NOT IMMERSE IN WATER OR ANY LIQUID

BEFORE FIRST USE

1. When using the Waffle Maker for the first time, wipe the non-stick cooking surfaces with a damp cloth and dry. Do not use abrasive cleaners, as this will damage the cooking surfaces. The exterior may be wiped with a clean, damp cloth. Do not immerse the unit, cord or plug in water or other liquid.
2. Before heating your Waffle Maker, the cooking surfaces may be sprayed or brushed with a small amount of non-stick spray or cooking oil. To protect the premium quality non-stick surface of your Waffle Maker, be sure to use only plastic, nylon or wooden utensils. The first time you use the Waffle Maker, a small amount of smoke may appear. This is normal and will disappear after a few seconds.

HOW TO MAKE GOLDEN,CRISPY WAFFLES.

1. Lightly brush or spray the cooking surface with cooking oil or non-stick spray. Please note: the first waffle may appear slightly dark due to the oil.
2. Close the lid and connect the plug to the wall socket. The Red Power light and Green Cook indicator light will come on, indicating that the unit is now starting to heat up
3. When the Green Cook indicator light goes 'OFF', the Waffle Maker will be at the ideal temperature for baking waffles. Raise the lid and pour 1/2 cup of the waffle batter, from a cup or pitcher, into the center of the cooking surface. Close the lid of the unit.
4. The waffle will require about 5 minutes to bake. The Green Cook indicator light will go off when the waffle is finished baking. Gently lift the lid to check for brownness. If the lid will not lift up easily, allow the waffle to cook for longer, and then try again.
5. When the desired brownness has been reached, remove the waffle from the Waffle Maker. Be sure to use only plastic, nylon or wooden utensils, designed for use on non-stick surfaces. Of more waffles are desired, simply add batter to the cooking surfaces in the same fashion as the first time.
6. **CAUTION:** Avoid leaving the Waffle Maker plugged in with no batter on the cooking surfaces for an extended period of time. When you have finished with the Waffle Maker, be sure to unplug the unit. Allow to cool before cleaning.

CLEANING INSTRUCTIONS.

1. After use and before cleaning remove plug and wait for Waffle Maker to cool.
2. Wipe the cooking surfaces with a clean, damp cloth or sponge.
3. For removing stubborn stains or food, use a nylon brush or other utensils safe for nonstick surfaces
4. Do not clean the inside or outside with and abrasive scouring pad or steel wool as this will damage the finish.
5. Do not use any abrasive cleaners.

DO NOT IMMERSE IN WATER OR ANY LIQUID