



## GUARANTEE CARD

### بطاقة كفالة

سنة واحدة

ITEM <small>نوع الجهاز</small> ELECTRIC KETTLE	MODEL NO. <small>رقم الموديل</small> KK-544
DATE OF PURCHASE <small>تاريخ الشراء</small>	SERIAL NO. <small>الرقم المتسلسل</small> 54411220001
BUYER'S NAME & ADDRESS <small>اسم البائع وعنوانه</small>	BUYER'S STAMP <small>ختم البائع</small>

#### GUARANTEE CARD



HomeElectric Offers the owner of this product one year limited Guarantee, from the date of purchase. Against all manufacturing defects in material and workmanship. If found defective, it should be delivered by the user's cost to the nearest authorized distributor and the unit will be repaired or replaced at their option, free of charge. During the guarantee period, which can then be collected by the buyer, the unit should be accompanied by this card, duly completed and stamped by an authorized dealer along with the cash memo. This Guarantee does not cover accidental damage, damage due to mishandling or abuse, or repairs made by unauthorized persons. It specifically excludes claims of any nature for indirect incidental or consequential damages.

• تسري هذه البطاقة فقط عند اكتمالها بمسورة صحيحة وتقديم دليل الشراء الذي يتكون من الفاتورة الأصلية أو إيصال البيع الذي يوضح تاريخ الشراء واسم البائع ونوع الجهاز ورقمه المتسلسل بالإضافة لختم البائع.

• تحتفظ شركة هوم الكتريك بحق رفض الكفالة إذا تم حذف / كسح هذه المعلومات أو تعديلها بعد الشراء الأصلي للمنتج من البائع.



HomeElectric And its authorized will make every effort to carry out expeditious repairs and replacement under this guarantee. However, they shall not be liable to do so within a specific time.

KARAM AND KHAIR TRADING CO.

Tel : 009624200002

Service-center@fkcco.com

www.fkcco.com

مركز الصيانة : الفرع الرئيسي - عمان - المغنطين - طرود المنصور - شارع عين بن سوريين

شركة الكرم والخير التجارية


009624200002 هاتف

مركز الصيانة : الفرع الرئيسي - عمان - المغنطين - طرود المنصور - شارع عين بن سوريين



HomeElectric

## INSTRUCTION MANUAL

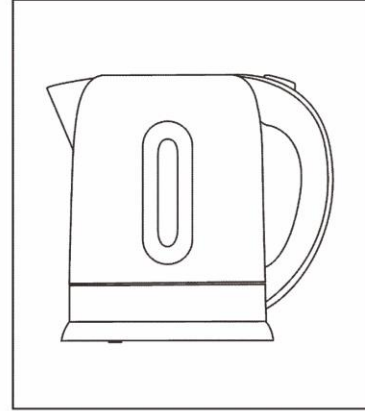

KK-544

360 DEGREE ROTATION  
AUTOMATIC CORDLESS KETTLE  
MADE IN P.R.C.

#### General Safety Instructions

- Before commissioning this kettle, please read the instruction manual carefully.
- Please keep the instruction manual, guarantee certificate, the sales receipt and if possible, the carton with the inner packaging.
- This kettle is intended exclusively for private and not for commercial use.
- Switch off the kettle and remove the plug from the socket when the kettle is not in use. When you disconnect the power cord of the kettle, grasp and pull the plug, not the cord/cable.
- Switch off the kettle before cleaning the kettle.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Test the kettle and the cord/cable regularly for damage. Check that the kettle is operating properly. If there is damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.
- Do not attempt to repair the kettle yourself, only authorised and qualified personnel may repair this kettle.
- Keep the kettle and cord/cable away from heat, direct sunlight, water, moisture, sharp edges and the like.
- Use only original accessories, do not connect incompatible products.
- Do not use the kettle outdoors.
- The base and exterior of the kettle are not water-resistant, keep it dry at all times.
- Under no circumstances must the kettle be placed in water or any liquid or come in contact with liquid. Do not handle the kettle with wet or moist hands. Should the kettle become wet or moist, remove the main plug from the socket immediately.
- DO NOT touch the contents of the kettle.
- Use the kettle only for its intended purpose.
- The kettle is only to be used with the stand provided.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

#### Special Safety Instructions for the Kettle

- Use only cold water when filling the device.
- The water level must be between the MAX. and MIN. marks.
- Switch the kettle off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Kettle body used must match with the kettle base.

#### First Use of the Kettle

- Before using the kettle for the first time, fill the kettle with cold water and boiled it twice without any additives.
1. Fill the kettle with water. Do not overfill. Use the water level indicator.
  2. Place the kettle on the base.
  3. Electrical connection
    - Check whether the electrical voltage which you intend to use is the same as that of the kettle. Details can be found on the label on the base of the kettle.
    - Only connect the kettle to a properly installed 220-240V 50/60Hz socket.

4. Switch the kettle to position '1'. The control lamp on the water indicator shows that the water is being boiled.
5. After boiling, the kettle switches off automatically. Disconnect the kettle from the mains electricity supply. Do not open the lid when pouring. If the kettle is overfilled, boiling water may be ejected. The kettle is only to be used with the stand provided.
6. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

#### Cleaning

Always remove the plug from the mains supply before cleaning the kettle.

The exterior of the kettle should be cleaned, if necessary, with a slightly damp cloth without additives.

The calcium filter can be removed for cleaning

Power Supply:  
220-240V 50/60Hz 1850-2200W

