振洲印刷：HomeElectric KK-551 IM 2024.1.31
Size:145x210mm

HomeElectric

INSTRUCTION MANUAL

KK-551

360 DEGREE ROTATION AUTOMATIC CORDLESS KETTLE

MADE IN P.R.C.

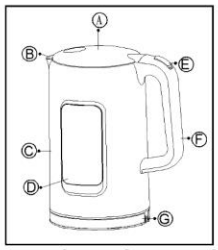

Ⓐ Cover Ⓑ Body Ⓒ Body housing Ⓓ PCB Panel

Ⓔ Cover starter Ⓕ Handel cover Ⓖ Base

1. Temperature Icon
2. Milk
3. Honey
4. Green tea
5. Coffee
6. Boil
7. Keep warm
8. Function selection key
9. Power (On/Off)

Operation Instruction

Please check whether your socket and power is suitable for this product before use
Do not exceed the maximum line of the mark(1700ml)
It is suggested to boil twice to clean the inner pot when first use

1 . Place the the kettle on a horizontal surface for use
2 . Open the lid and pour water into the kettle
3. Connect with power, enter the setting interface, and press the button for boiling water (you can select the setting temperature you need under the setting interface).
4. Take off the kettle for brewing

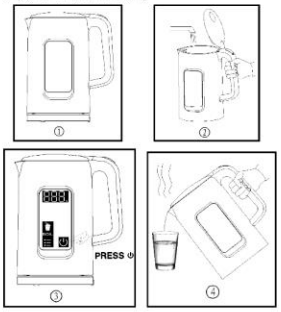

When using your kettle, basic safety precautions should always be followed, including the following:

1. Read all instruction carefully and thoroughly, before any operation of the kettle.
2. Close supervision is necessary when any appliance is used by or near children.
3. Before connecting the kettle , check whether the voltage indicated on the appliance(underside of kettle and base unit) corresponds with the mains voltage in your home. If this is not the case, contact your dealer and not use the kettle.
4. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
5. Do not overfill as boiling water may be ejected, the maximum level indicator. Fill with cold water only.
6. To avoid against fire, do not operated in the presence of explosive and/or flammable fumes. Such as do not operate or place any party of this appliance on or near gas and electric burner or in a heated oven.
7. Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surface.
8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
9. If the cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any way, return the appliance completely to your nearest authorized service agent for examination, repair or adjustment.
10. Avoid touching the surface of the hot kettle, use the handle and knobs.
11. To avoid possible steam damage, not face the spout when operating the kettle.
12. If operated on wood furniture , use a protective pad to prevent damage to delicate finishes.
13. To avoid scalding, always ensure the lid is correctly positioned before operation.
14. Scalding may occur if the lid is removed while heating.
15. Remove and replace the lid carefully when hot.
16. Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
17. Do not switch your kettle on if it is empty.
18. To protect from electrical hazard, do not immerse this kettle, power base or cord set in any liquid.
19. Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
20. To protect against fire, do not operated in the presence of explosive and/or flammable fumes.
21. While the water boiling or in the short time after the water boils, please be sure that don't attempt to open the cover for avoid the steam scalding your hand.
22. Please avoid the liquid sprinkling in the LCD board and the pressed key place in the operating process. Because the water possibly can plunge in the product, causes the function to be unusual.
23. Please do not have to add surpasses the maximum water volume the water, because this has the possibility to damage the product, causes the product movement to appear exceptionally.
24. Please regular clean descale or pot bottom residuum, because this possibly can affect the normal use of the product.
25. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
26. This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.

Save the instruction

Basic Operation:

① Temperature Icon: Show the real-time and setting temperature

② Milk: 40℃

③ Honey: 70℃

④ Green tea: 80℃

⑤ Coffee: 88℃

⑥ Boil: 100℃

⑦ Keep warm: This icon light up indicating that it is in the keep warm state

⑧ Function selection key: under setting interface, short Press ☰, select relevant icon of corresponding temperature 40 70 80 88 100℃.

Long Press ☰ for two seconds, select the nearest temperature, enter the keep warm function for one hours automatically.

When the water temperature is lower than the set value of about 5 degrees, the heat will be resumed until 2 hours. Under keep warm state ,the three key ☰ ⏻ WARM and the selected temperature icon light up ,and Long press ☰ For 7 seconds , The keep warm will be canceled.

⑨ Power (On/Off): Under setting interface , quick press ⏻ , Buzzer "Di" ,the screen show Boil icon 100℃. The three key ☰ ⏻ BOIL light up, the screen show the current real temperature and enter into the boil state.After boiled , the buzzer sound "Di Di" ,after 30 seconds ,all light off except the power key switch into breath light. (In the power state, the power key lights up, if there is no operation within 30 seconds, the kettle automatically enters the standby state, and the power key light is switch into breath light. In the standby state, press the power key and function selection key to be effective; in the setting interface, press for 3 seconds, the kettle will enter the standby state)

⑧ In the state of keep warm , after boiling water to the set temperature, the function of memory starts. Within ten times of kettle lifting, the water temperature of the kettle should not be less than 8 degrees below the set value for each time, and the memory is effective, that is, the keep warm continues to work and the time of keep warm continues to the last time. Otherwise exit the keep warm

How to care for your kettle

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.
Never immerse the kettle in water or other liquids.
From time to time, depended on the nature of your water supply, a boiled scale deposit is naturally formed and can be found mostly adherent to the heating element, thus reducing the heating efficiency.
The amount of boiled scale deposited (and subsequently the need to clean or rescale) largely depends on the water hardness in your area the frequency with which the kettle is used.
Boiled scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

Descaling

Under normal use, it is generally necessary to clean and descale at least twice a year, the specific method is as follows:
1. Mix daily vinegar with water in a ratio of 1:2, fill the kettle (the highest water level) to start boiling water, and wait for the kettle to boil
2. Leave the mixture for 12 hours.
3. Pour off the mixture.
4. Fill clean water to the highest water level and restart the boil function.
5. Pour off the boiling water, The scale and mixture has been removed and the cleaning of the kettle is completed.

Electric data: 220-240V~ 50-60Hz 1850-2200W 1.7L

HomeElectric

GUARANTEE CARD

بطاقـــة كفالـــة

سنة واحدة

ITEM نوع الجهاز: ELECTRIC KETTLE	MODEL NO. رقم الموديل: KK-551
DATE OF PURCHASE تاريخ الشراء:	SERIAL NO. الرقم التسلسلي: 55103240001
BUYER'S NAME & ADDRESS اسم البائع وعنوانه:	BUYER'S STAMP ختم البائع:

GUARANTEE CARD

HomeElectric Offers the owner of this product one year limited Guarantee, from the date of purchase. Against all manufacturing defects in material and workmanship. If found defective, it should be delivered by the user's cost to the nearest authorized distributor and the unit will be repaired or replaced at their option, free of charge. During the guarantee period, which can then be enlarged by the buyer, the unit should be accompanied by this card, duly completed and stamped by an authorized dealer along with the cash memo. This Guarantee does not cover accidental damage, damage due to mishandling or abuse, or repairs made by unauthorized persons. It specifically excludes claims of any nature for indirect incidental or consequential damages.

HomeElectric And its authorized will make every effort to carry out expeditious repairs and replacement under this guarantee. However, they shall not be liable to do so within a specific time.

- تسري هذه البطاقة فقط عند اكمالها بصورة صحيحة وتقديم دليل الشراء الذي يتكون من الفاتورة الأصلية أو إيصال البيع الذي يوضح تاريخ الشراء واسم البائع و نوع الجهاز ورقمه التسلسلي بالاضافة لختم البائع .
- تحتفظ شركة هوم الكتريك بحق رفض الكفالة إذا تم حذف / كشط هذه المعلومات أو تعديلها بعد الشراء الأصلي للمنتج من البائع .

KARAM AND KHAIR TRADING CO.
Tel : 009624200002
Service-center@fkco.com
www.fkco.com

شركة الكرم والخير التجارية
هاتف: 009624200002
مركز الصيانة : شارع الرئيسي – حفان – الطيلق – طريق الناصرية – شارع عين بن سويل