


## **Users' Manual**

MODEL:HOF-2030


(Pls. Read and save these instructions carefully)

Assembly diagram:

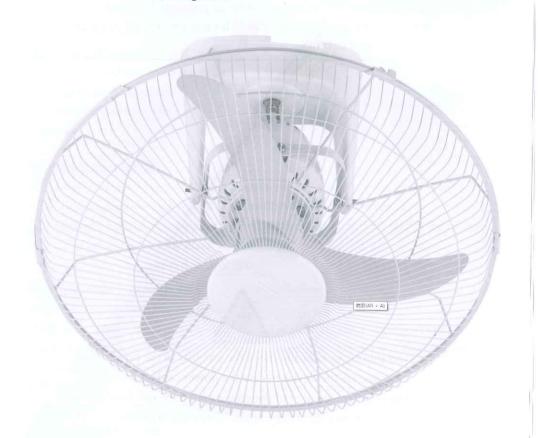


## Assembly instructions:

1. Connect the pillar to the base With four tightening screws and tighten Nuts to the bolts at the bottom of the base.

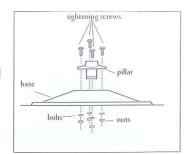

- 2. Place to motor on the top of the pole and lock the fasting screw.
- 3. Place the back safe guard grill on the metal plate of the motor.
- 4. Fix the grill to the motor with the 4 screws attached.
- 5. Slide the blade on the motor exile and fasten the locking screw. 6. Place the front side grill over the back side grill and lock it to it with the grill locks so it will hold both sides of grill together.
- 7. Fasten the grill screw for sure lock.

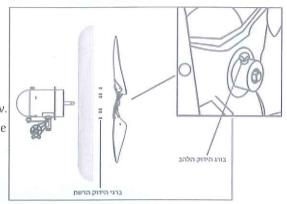

## Operating instructions:

- 1. Connect to power source. Please make that the out put of your socket in 230V ~ 50Hz.
- 2. Select the speed wanted: spead1/spead2/spead3/spead4/spead5.
- 3. For left and right oscillating press on the black screw on the back part of the motor.
- 4. To stop oscillating pull the black screw back up.
- 5. To atop fan work, set speed control to 0.

## Cleaning and maintenance:

- 1. Unplug the fan from the power source.
- 2. Do not wash the fan under running water. For cleaning use a slightly wet towel.
- 3. Do not attempt to dis assemble the fan for cleaning purposes Cleaning operation should take part when fan is fully assembled.
- 4. If after clean up the fan is not working please contact the laboratory service instructions.
- 5. To dis assemble the fan, please reverse the assembly steps.

220~240V,50/60Hz 65W MADE IN CHINA Please read the instructions for use and operation, to preserve them and to act solely on them. Maintaining and operating instructions for use, ensures the integrity of the product, and pleasure used over time.



You should periodically check the integrity of the power cord.

Do not use the device in case the power cable is damaged.

Repair or replacement of the power cord may only be made in service laboratory accredited by the importer.